

**RTP-01B  
PCI DUAL PRINTER CARD  
USER'S MANUAL**

**1) FEATURES**

- \* MULTI-MODE COMPATIBLE (SPP, BPP, EPP, ECP).
- \* FAST DATA RATES UP TO 1.5 Mbytes/S.
- \* CAN SUPPORT 16 BYTE FIFO.
- \* I/O ADDRESS SELECT BY SOFTWARE: PLUG & PLAY OR RE-MAP TO ISA ADDRESS 378H, 278H.
- \* BOARD'S INTERRUPT SELECT BY HARDWARE.

**2) HARDWARE DESCRIPTION**

- JP1 : FOR BOARD'S INTERRUPT SELECT. DEFAULT SETTING AT POSITION 1 (INTRA).
- 1ST PORT : CONTROL JUMPER -- JP1, JP2, P1
- JP2 : SPECIAL PURPOSE FOR CONNECT PORT'S PIN (24) VOLTAGE OUTPUT HARDWARE SELECT. DEFAULT SETTING AT EMPTY.
- 1&2 - FOR VOLTAGE +12V OUTPUT.
- 2&3 - FOR POWER GROUND.
- P1 : FIRST PCI PARALLEL PRINTER PORT CONNECTOR.
- 2ND PORT : CONTROL JUMPER -- JP4, P2
- JP4 : SPECIAL PURPOSE FOR CONNECT PORT'S PIN VOLTAGE OUTPUT HARDWARE SELECT. DEFAULT SETTING AT EMPTY.
- 1&2 - FOR VOLTAGE +12V OUTPUT.
- 2&3 - FOR POWER GROUND.
- P2 : SECOND PCI PARALLEL PRINTER PORT.

**3) SOFTWARE DESCRIPTION**

- \* SOFTWARE DRIVER SUPPORT TO WINDOWS 95, WINDOWS 98, XP, WINDOWS ME, WINDOWS NT, WINDOWS 2000, LINUX SYSTEM AND DOS OPERATING SYSTEM.(FILE/? FOR DOS DRIVER SETTING).

**4) INSTALLATION:**

- STEP 1. CHECK THE COMPUTER OPERATING SYSTEM AND SELECT SOFTWARE TO UNZIP THE ZIP FILE.
- STEP 2. REMOVE THE HOST COMPUTER AC POWER LINE SUPPLY.
- STEP 3. PLUG THE RTP-01B ADAPTER INTO THE MOTHER BOARD.
- STEP 4. CONNECT THE PRINTER MACHINE OR RELATIVE MACHINE TO THE RTP-01B BOARD'S CONNECTOR.
- STEP 5. PLUG AC POWER LINE TO THE HOST PC.
- STEP 6. STEP BY STEP, FOLLOW WINDOW'S INSTRUCTION AND INSTALL THE DRIVERS TO WINDOWS OPERATING SYSTEM FROM UNZIP FILE.