

RTP-03A PCI DUAL SERIAL CARD USER'S MANUAL

1) FEATURES

- * 16 BYTE TRANSMIT-RECEIVE FIFO (UART).
- * PROGRAMMABLE BAUD RATE BY SOFTWARE.
- * SERIAL'S OPERATING CLOCK SELECT BY HARDWARE. (SERIAL SPEED Max. UP TO 1384KB/S, DEFAULT SETTING UP TO 115.2KB)
- * ADDRESS MODE : PLUG & PLAY OR RE-MAP TO ISA ADDRESS 3F8H, 2F8H, 3E8H, 2E8H.

2) HARDWARE DESCRIPTION

- JP3 : BOARD'S INTERRUPT SELECT. DEFAULT SETTING AT POSITION 1 (INTRA).
- MK1 : SERIAL OPERATING FREQUENCY GROUP SELECT :
1&2 (FS) -- FIRST FREQUENCY GROUP SELECT.
2&3 (SS) -- SECOND FREQUENCY GROUP SELECT.
- JK1 : FIRST SERIAL PORT CLOCK SELECT.
- S1 : FIRST SERIAL PORT CONNECTER.
- JK2 : SECOND SERIAL PORT CLOCK SELECT.
- S2 : SECOND SERIAL PORT CONNECTER.

| MK1 | JK1, JK2 | DESCRIPTION (1xK:Max.=115.2KB/S) |
|-----|----------|----------------------------------|
| 1&2 | 1K | DEFAULT (1xK = 1.84MHZ) |
| | 2K | SELECTABLE (2xK = 3.68MHZ) |
| | 4K | SELECTABLE (4xK = 7.36MHZ) |
| | 12K | SELECTABLE (12xK= 21.08MHZ) |
| 2&3 | (2.75K) | SELECTABLE (2.75K = 5.06MHZ) |
| | (5.5K) | SELECTABLE (5.5K = 10.1MHZ) |
| | (11K) | SELECTABLE (11K = 20.2MHZ) |

3) SOFTWARE DESCRIPTION

- * SOFTWARE DRIVER SUPPORT TO WINDOWS 95, WINDOWS 98, XP, WINDOWS NT, WINDOWS 2000, LINUX SYSTEM AND DOS OPERATING SYSTEM (FILE/? FOR DOS DRIVER SETTING).

4) INSTALLATION:

- STEP 1. CHECK THE COMPUTER OPERATING SYSTEM AND SELECT SOFTWARE TO UNZIP THE ZIP FILE.
- STEP 2. REMOVE THE HOST COMPUTER AC POWER LINE SUPPLY.
- STEP 3. PLUG THE RTP-03A ADAPTER INTO THE MOTHER BOARD.
- STEP 4. CONNECT THE PRINTER MACHINE OR RELATIVE MACHINE TO THE RTP-03A BOARD'S CONNECTOR.
- STEP 5. PLUG AC POWER LINE TO THE HOST PC.
- STEP 6. STEP BY STEP, FOLLOW WINDOW'S INSTRUCTION AND INSTALL THE DRIVERS TO WINDOWS OPERATING SYSTEM FROM UNZIP FILE.